


# *FrontAIRE*


## **Controller Operator's Manual**

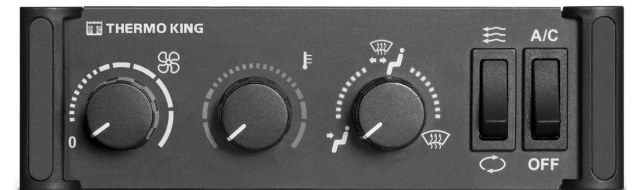

BCA011

 **THERMO KING**

TK 51708-3-PC © Thermo King Corporation

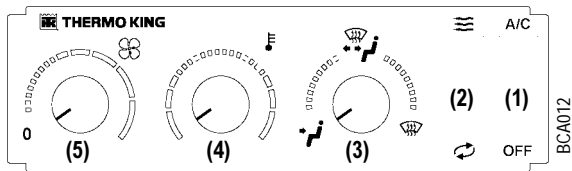

### (1) COOLING ON/OFF SWITCH



Cooling operation with independent driver's A/C system:

- A/C Turn ON driver's A/C unit. (Turn on blower.)
- OFF Turn OFF driver's A/C unit.

Cooling operation with frontbox connected to the main A/C system:


 
- A/C Cooling ON (Cooling will only operate when the main A/C system is working in cool mode. Turn on blower.)
- OFF Cooling OFF.

### (2) FRESH AIR DAMPER SELECTION SWITCH


-  Fresh air damper open.
-  Fresh air damper closed.

### (3) AIR DISTRIBUTION SELECTION KNOB


Turn the knob to select the desired air distribution.

-  Driver.
-  Windshield.

### (4) HEATING SELECTION KNOB

-  Turn the knob to the right to open the heater valve for more heat. Turn the knob to the left to close the heater valve.
- NOTE: The heating is used to operate the unit in reheat and to control the air temperature in the cool mode.

### (5) BLOWER SPEED SELECTION KNOB

-  Turn the knob to the right for higher air speed. Turn the knob to the left for less air speed (0 = stop).
- NOTE: Always turn on the blower when in cool mode. Minimal blower speed in cool mode is 25 %.

## Warranty Instructions

Should you require warranty service during the warranty period, simply present your copy of the Warranty Certificate at any of the dealer locations shown in the Thermo King Service Directory. Terms of the complete Thermo King Corporation Warranty are available on request.

**CAUTION: This is a driver's reference guide. If further information is required, consult your Thermo King service directory for the location and phone of the local dealer.**