



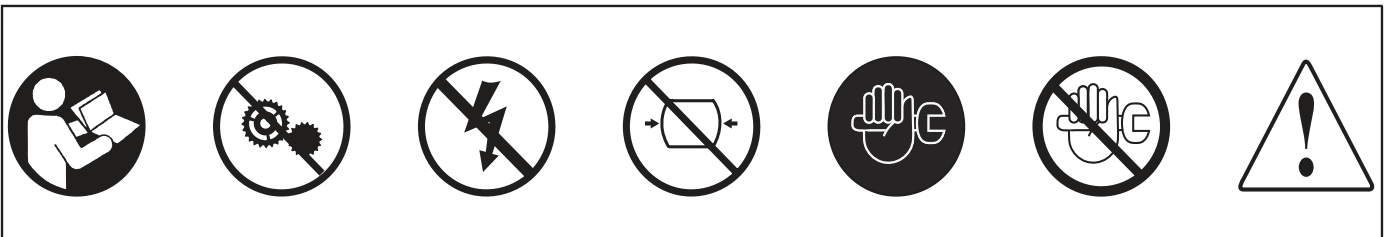


THERMO KING



TouchPrint Datalogger User manual

The TouchPrint logo, featuring a blue thermometer icon to the left of the word 'TouchPrint' in a blue, sans-serif font.

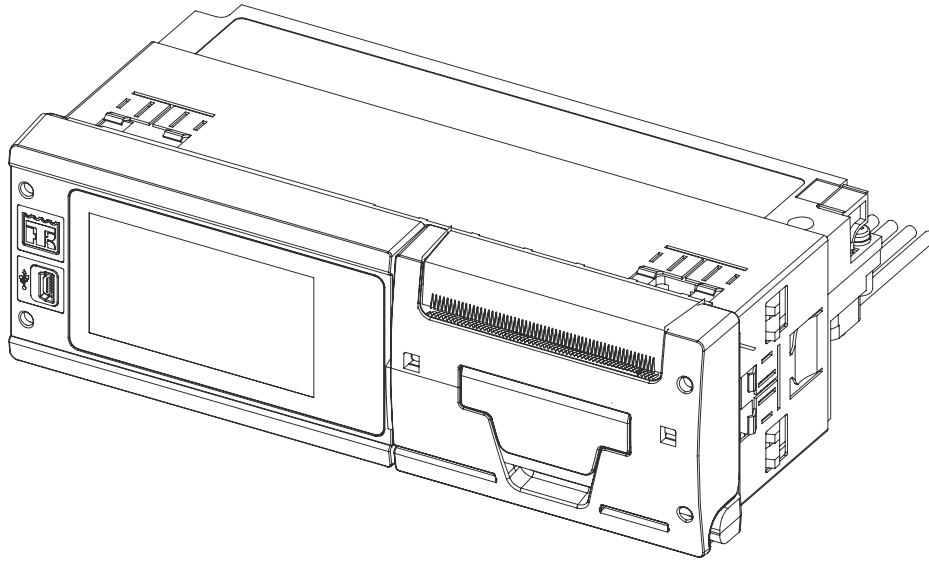

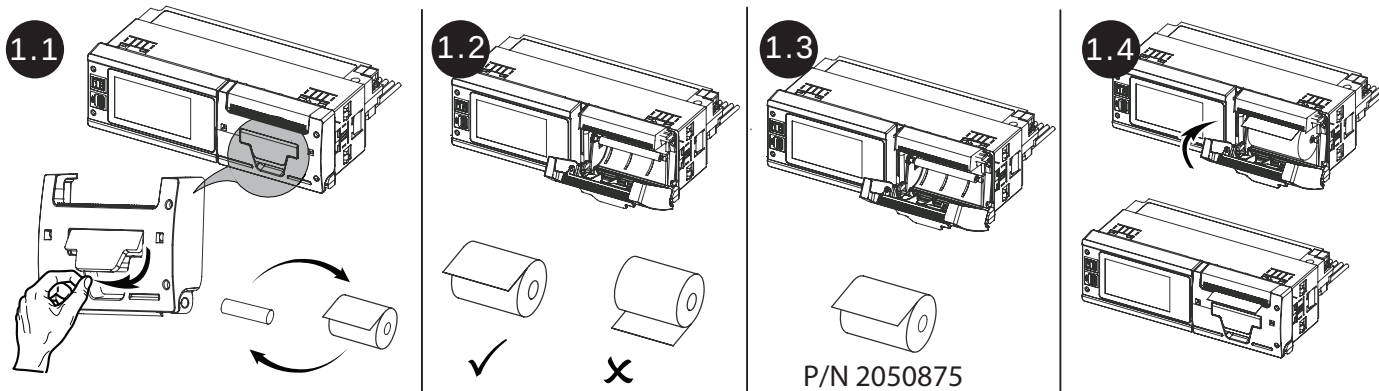1. RELOADING THE PAPER ROLL 

2. BASIC MENU OPERATION

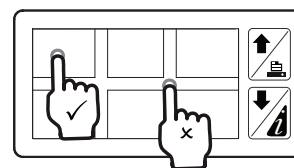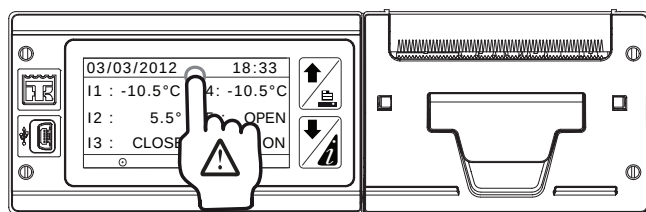

8 Buttons




Quick Print



Quick Info

3. MAIN MENU

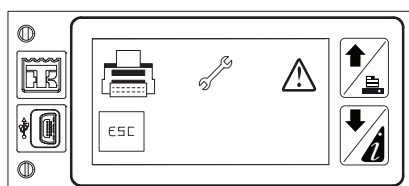



Print Menu



User Menu



Alarm Menu

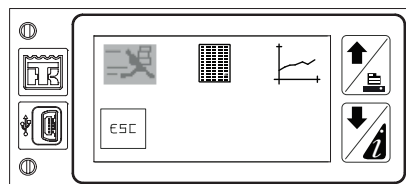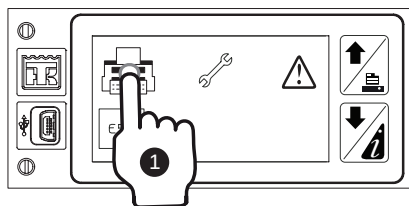4. PRINT MENU 




Delivery Ticket



Trip Ticket



Journey Ticket Graph

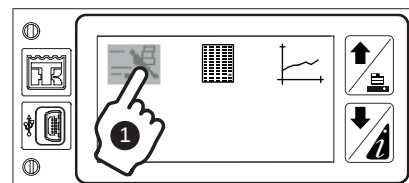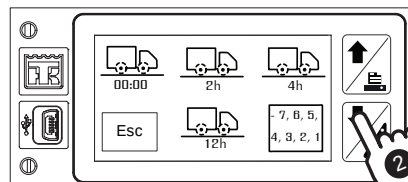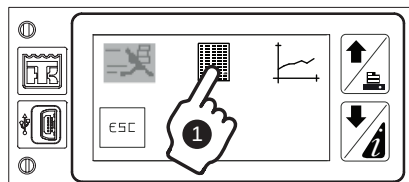4.1 PRINTING A DELIVERY TICKET 4.2 PRINTING A TRIP TICKET 

Midnight till now




Past 2 hours



Past 4 hours



Past 12 hours

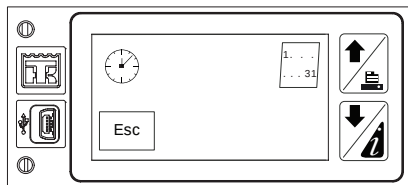

7, 8, 5,
4, 3, 2, 1

Specific day from the past 7 days





Specific start time to present time




1...
...31

Specific start and end date

4.3 CANCEL PRINTING

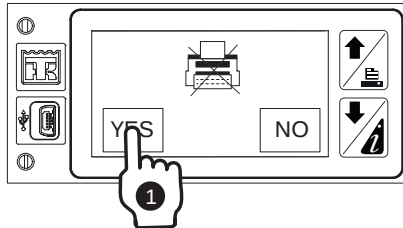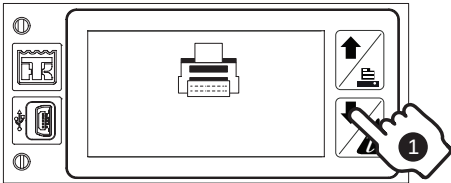

5. USER MENU

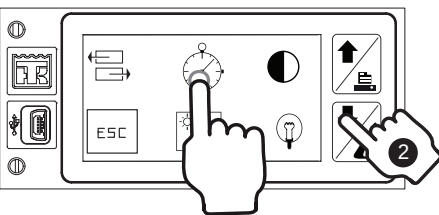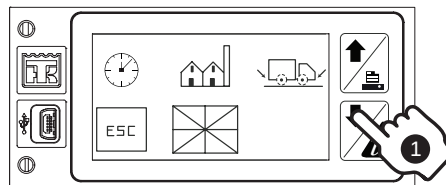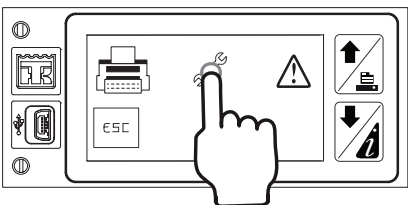

Adjusting the Time & the Date



Company Reference



Trailer ID



Language



Input Setting



Temperature Unit



Export in Pdf/ txt



Logging Interval



Contrast



Daylight Saving Time Set



Brightness



Touchprint Firmware






Media Selection For Printing






Labels


5.1 ADJUSTING THE TIME & THE DATE

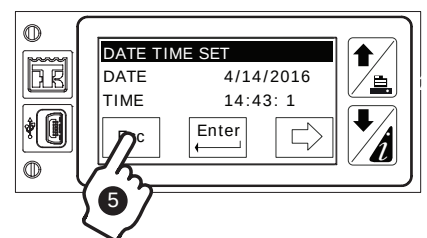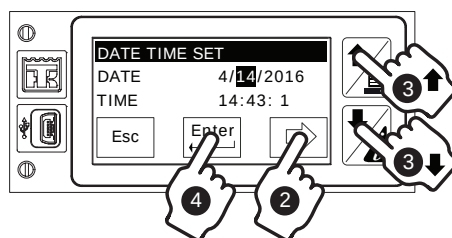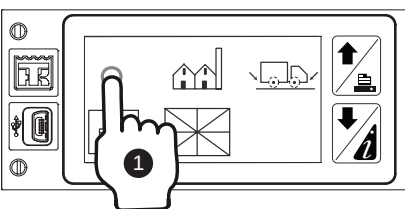


5.2 COMPANY REFERENCE

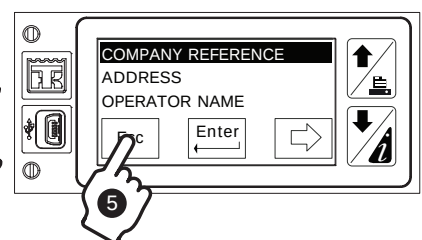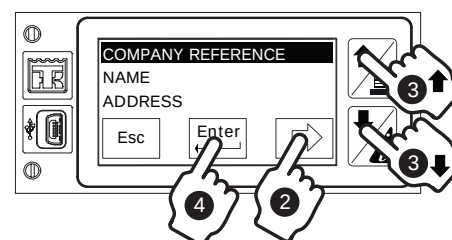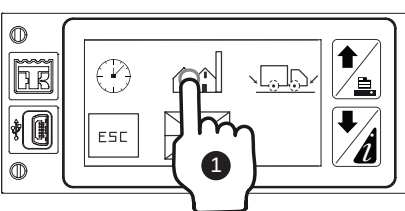


5.3 TRAILER ID

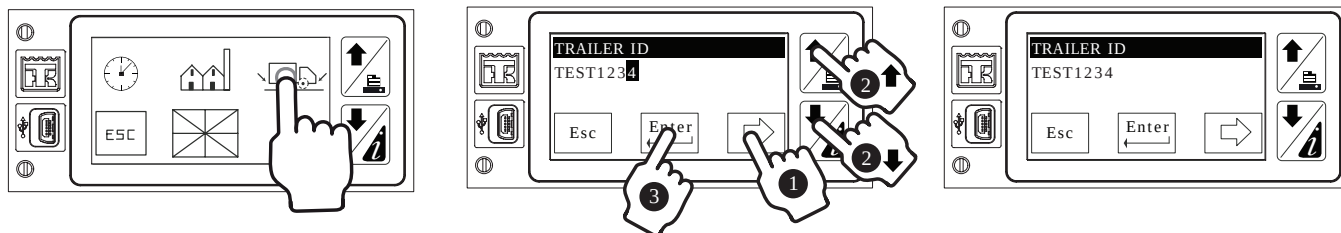


5.4 LANGUAGE SELECTION

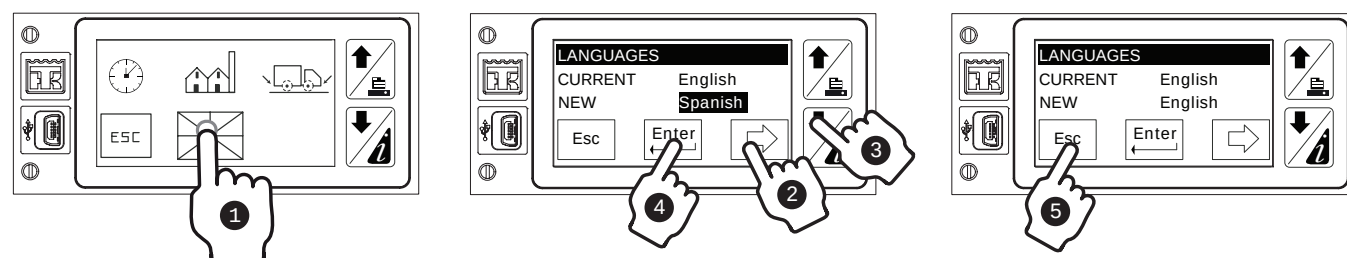


5.5 SETTING THE LOGGING INTERVAL

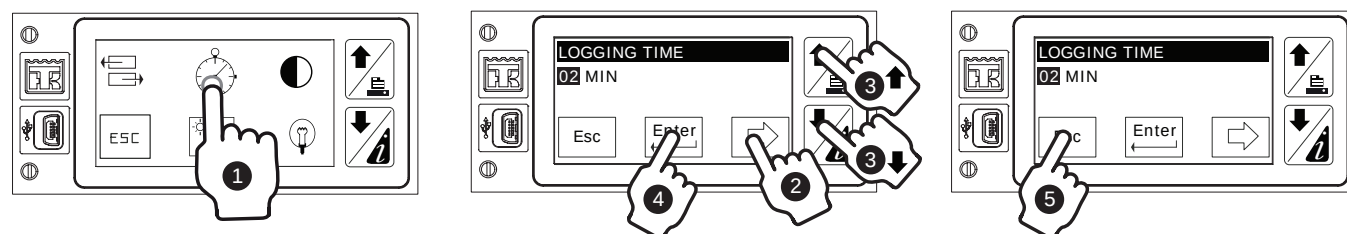


5.6 CHANGE CONTRAST SETTING

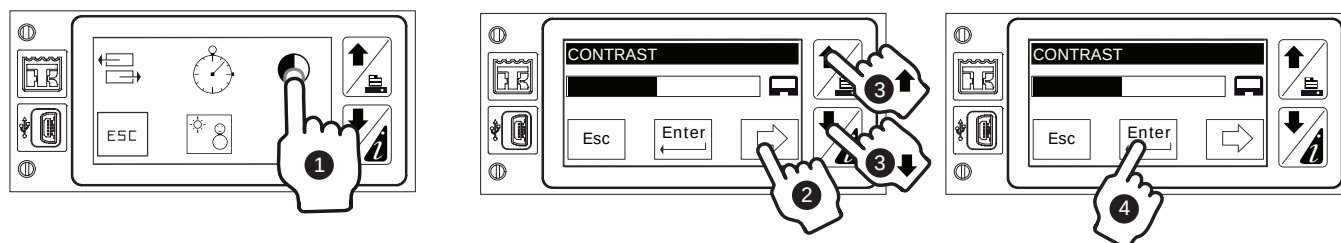


5.7 DAYLIGHT SAVING TIMESET

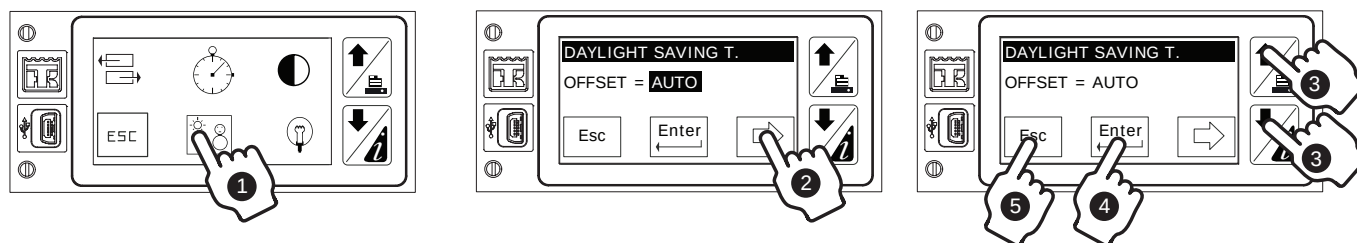


5.8 BACKLIGHT SETTINGS

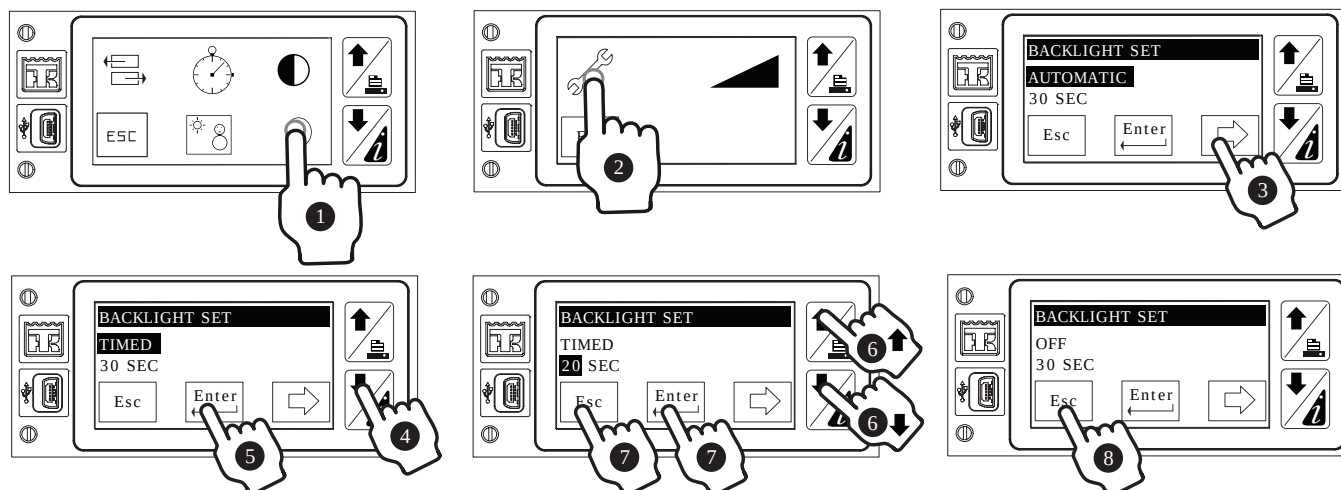


5.9 BRIGHTNESS SETTING

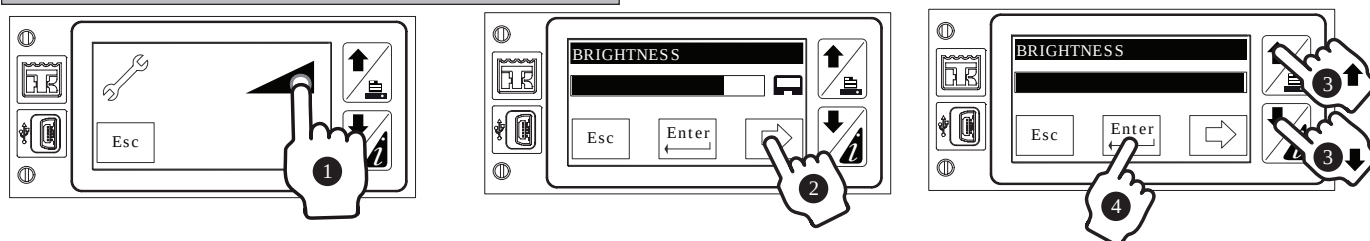


5.10 MEDIA SELECTION FOR PRINTING

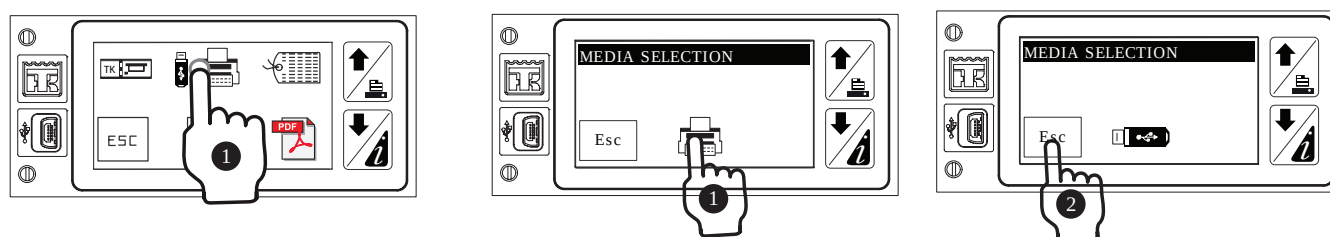


5.11 CHANGING THE TEMPERATURE UNIT OF MEASURE

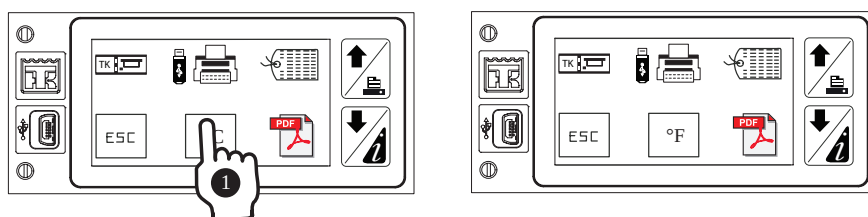


5.12 EXPORT IN PDF / TXT FORMAT

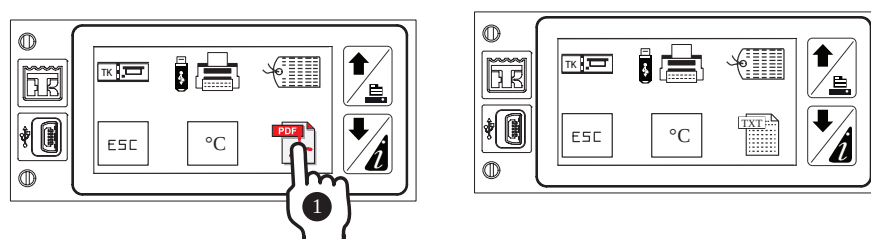


6. ALARM MENU

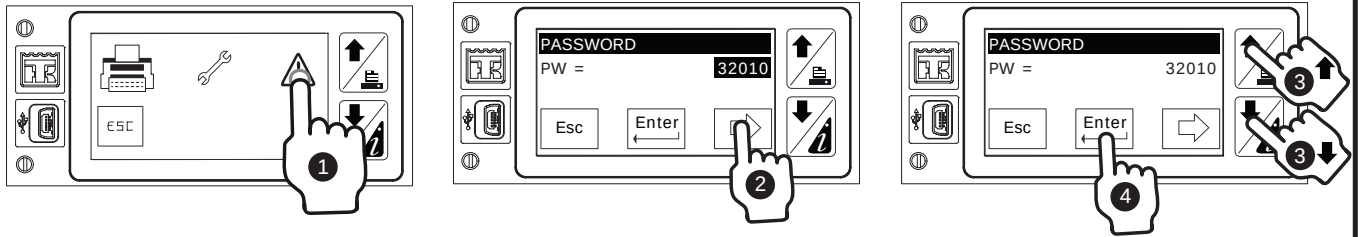


6.1 SETTING INPUT TEMPERATURE RANGE

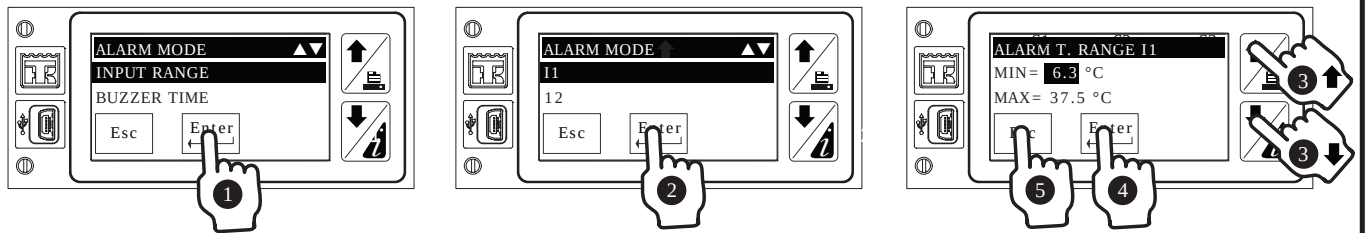


6.2 SETTING BUZZER TIME

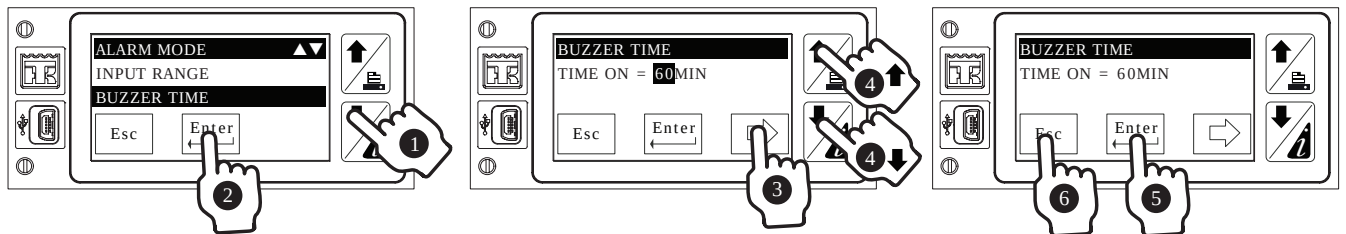


6.3 SETTING OUTPUT TIME

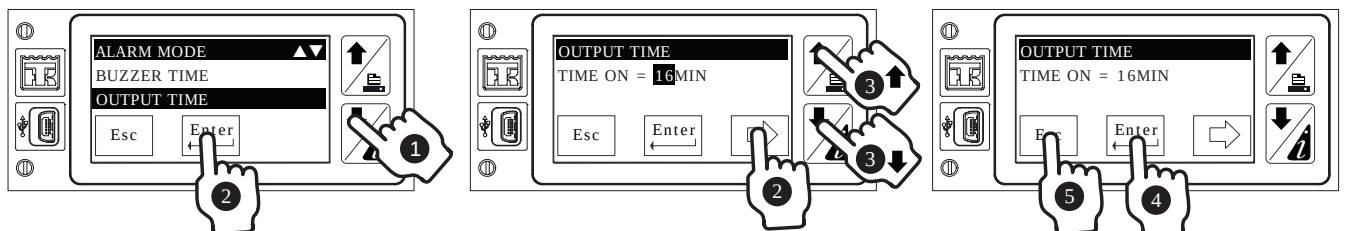




6.4. CLEARING THE ALARM

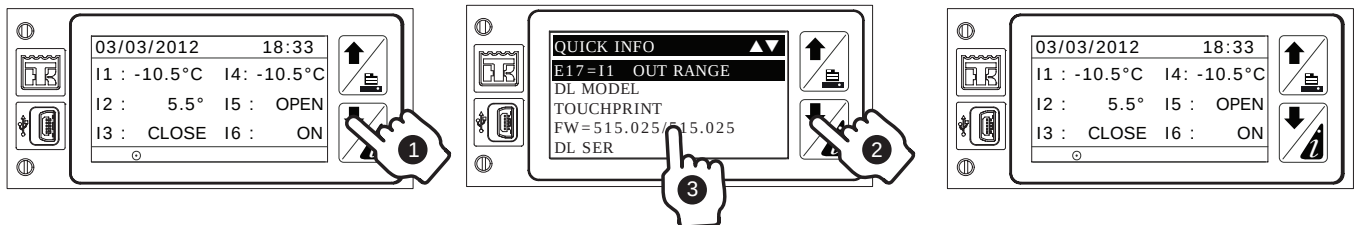

7. ADVANCED OPERATION

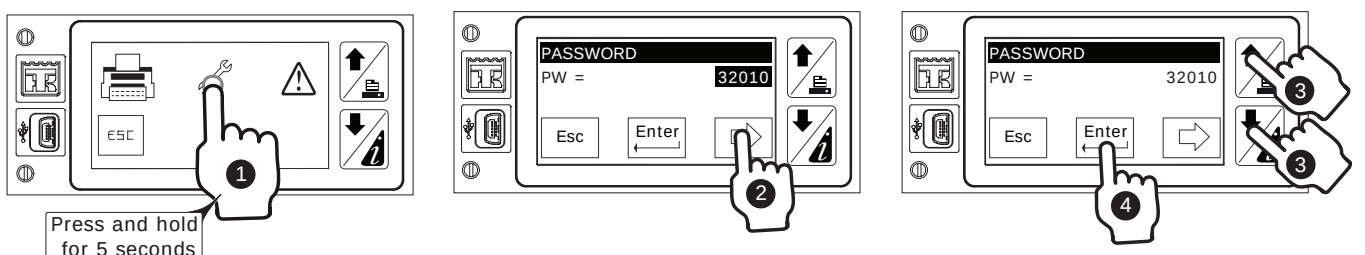

7.1 SERVICE MENU

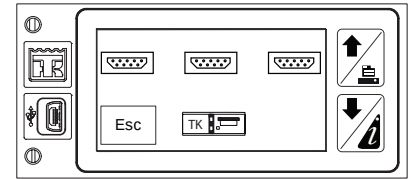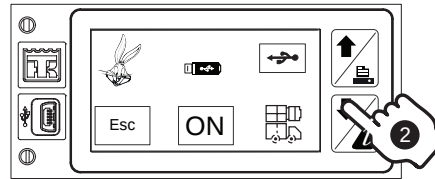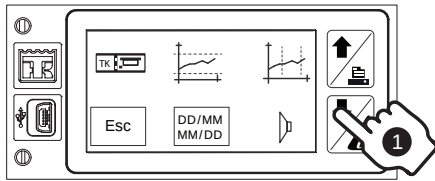

Datalogger Model Name

Buzzer Sound

ON/AUTO/OFF Data Logging

Temperature Range for Graph Printing

Short Logging Interval

Format Zone Selection

Time Scale for Graph Printing

Firmware Update



UART Setting

Date Format




Wintrac Interface Via USB

Trailer Vs Truck Installation




7.2 DATALOGGER MODEL

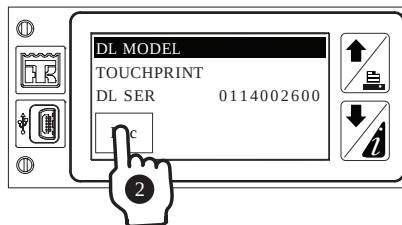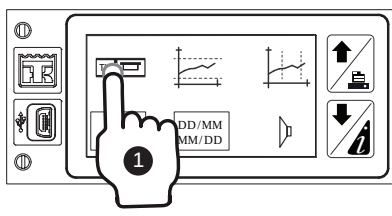




7.3 TEMPERATURE RANGE FOR GRAPH PRINT

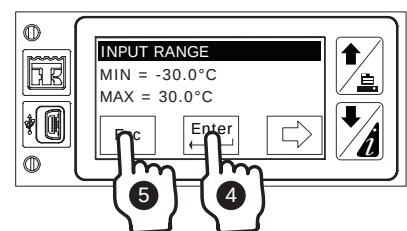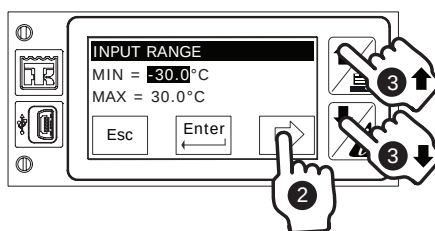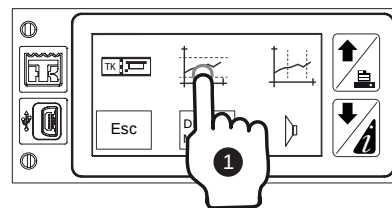


7.4 TIME SCALE FOR GRAPH PRINT

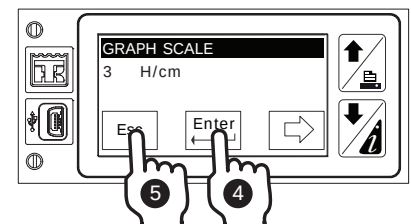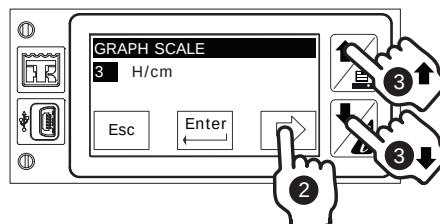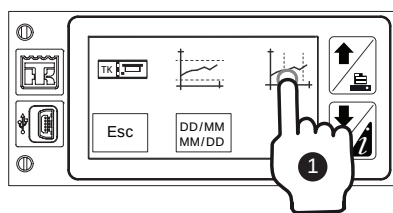


7.5 DATE FORMAT

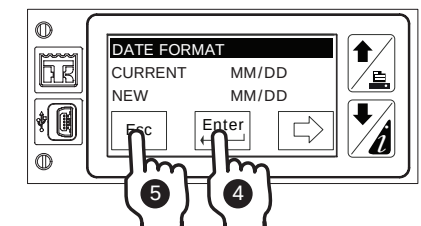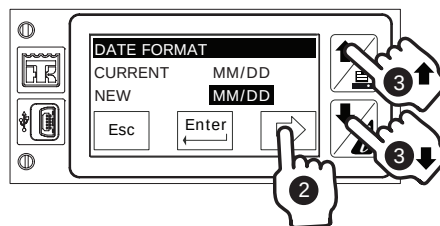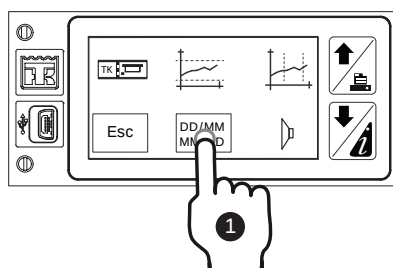


7.6 BUZZER SOUND

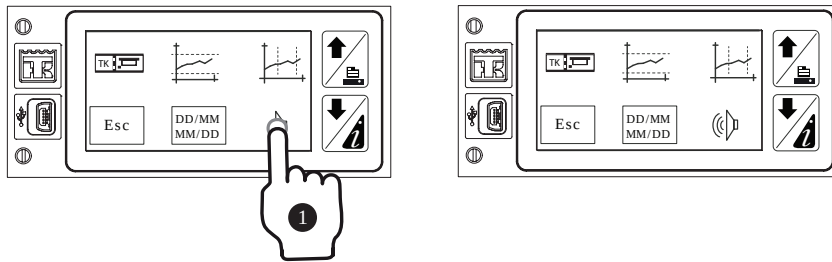


7.7 FIRMWARE UPDATE

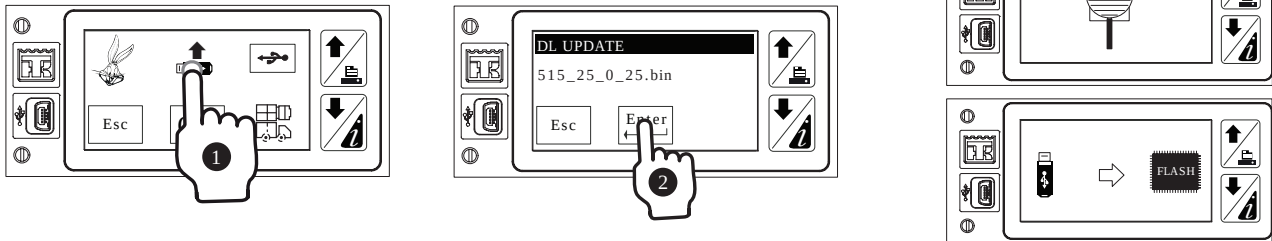

7.8 LOGGING MODES: ON, AUTO, OFF

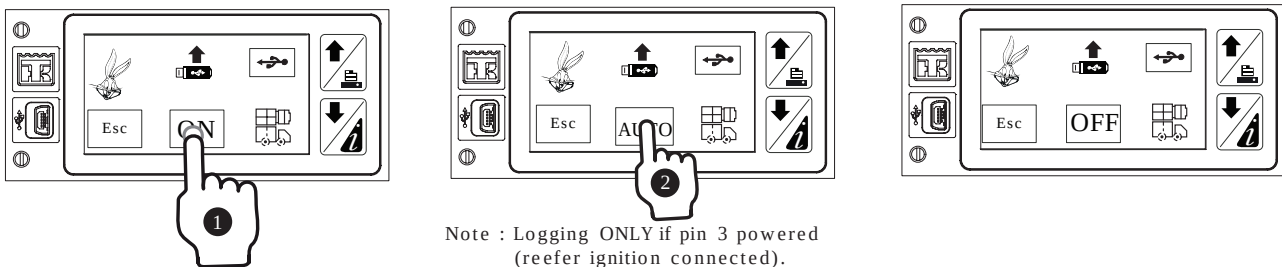

7.9 ZONES SELECTION

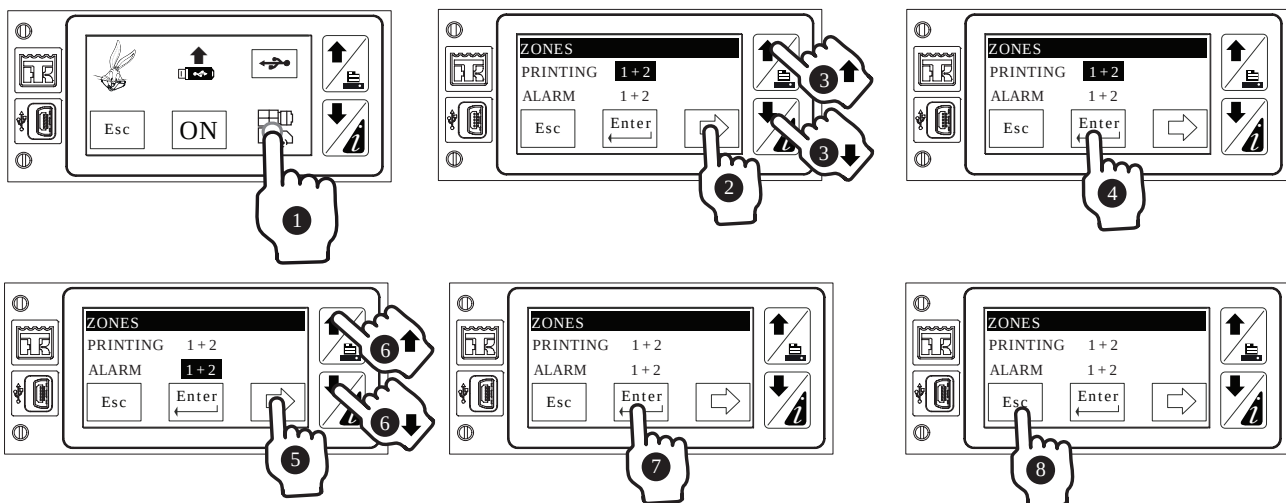

7.10 TRUCK VS TRAILER SELECTION

