

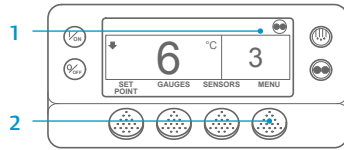
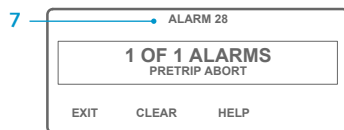


SIMPLE TO VIEW

Cause of Alarm

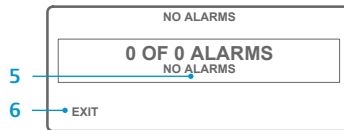


1. Return to the Standard Display Screen.
2. Press the MENU Key.
3. Press the NEXT Key until the Alarm Menu appears.
4. Press the SELECT Key. The Alarm Display will appear.
5. If no alarms are present, Alarm 00 is shown.
6. Press the EXIT Key to return to the Standard Display.
7. If alarms are present, the number of alarms and the most recent alarm code number will be shown.
8. If there is more than one alarm, press the NEXT Key to view each alarm.
9. If a serious alarm occurs, the unit will be shut down to prevent damage to the unit or the load. If this occurs, the display will show that the unit is shut down and display the alarm code that caused the shutdown.

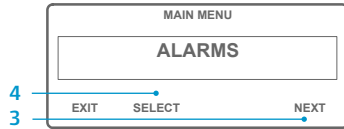


SIMPLE TO VIEW

Clearing Alarm Codes

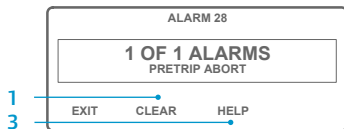

1. Press the CLEAR Key to clear an alarm.
2. The display screen will return to the Standard Display when the alarms are cleared.
3. Press the HELP key for additional information on the display. Also see the complete Alarm Code list in the next column.

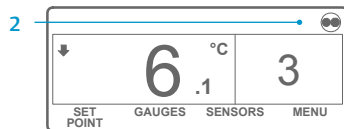

NOTE: For more detailed information on each action, see the Operation chapter in the appropriate unit operating manual.

SIMPLE TO DETERMINE

Cause of Alarm

- | | | | |
|----|--|-----|---|
| 0 | No Alarms Exist | 83 | Low Engine Coolant Temperature |
| 2 | Evaporator Coil Sensor | 84 | Restart Null |
| 3 | Control Return Air Sensor | 85 | Forced Unit Operation |
| 4 | Control Discharge Air Sensor | 86 | Discharge Pressure Sensor |
| 5 | Ambient Air Sensor | 87 | Suction Pressure Sensor |
| 6 | Coolant Temp Sensor | 89 | Check Electronic Throttling Valve Circuit |
| 7 | Engine RPM Sensor | 90 | Electric Overload |
| 9 | High Evaporator Temperature | 91 | Electric Ready Input |
| 10 | High Discharge Pressure | 92 | Sensor Grades Not Set |
| 11 | Unit Controlling on Alternate Sensor | 93 | Low Compressor Suction Pressure |
| 12 | Sensor or Digital Input Shutdown | 94 | Loader #1 Circuit |
| 13 | Sensor Check | 95 | Loader #2 Circuit |
| 15 | Check Glow Plugs/Intake Air Heater | 96 | Low Fuel Level |
| 17 | Engine Failed to Crank | 98 | Fuel Level Sensor |
| 18 | High Engine Coolant Temperature | 99 | High Compressor Pressure Ratio |
| 19 | Low Engine Oil Pressure | 108 | Door Open Time-out |
| 20 | Engine Failed to Start | 111 | Unit Not Configured Correctly |
| 21 | Cooling Cycle Check | 113 | Electric Heat Circuit |
| 22 | Heating Cycle Check | 114 | Multiple Alarms - Cannot Run |
| 23 | Cooling Cycle Fault | 115 | Check High Pressure Cut out Switch |
| 24 | Heating Cycle Fault | 116 | Check High Pressure Cut In Switch |
| 25 | Alternator Check | 117 | Auto Switch from Diesel to Electric |
| 26 | Refrigeration Capacity | 118 | Auto Switch from Electric to Diesel |
| 28 | Pretrip or Self Check Abort | 120 | Alternator Exciter Circuit |
| 29 | Defrost Damper Circuit | 121 | Liquid Injection Circuit |
| 30 | Defrost Damper Stuck | 122 | Diesel/Electric Relay Circuit |
| 31 | Oil Pressure Switch | 127 | Setpoint Not Entered |
| 32 | Refrigeration Capacity Low | 128 | Engine Run Time Maintenance Reminder #1 |
| 33 | Check Engine RPM | 129 | Engine Run Time Maintenance Reminder #2 |
| 35 | Run Relay Circuit | 130 | Electric Run Time Maintenance Reminder #1 |
| 36 | Electric Motor Failed to Run | 131 | Electric Run Time Maintenance Reminder #2 |
| 37 | Engine Coolant Level | 132 | Total Unit Run Time Maintenance Reminder #1 |
| 38 | Electric Phase Reversed | 133 | Total Unit Run Time Maintenance Reminder #2 |
| 39 | Water Valve Circuit | 134 | Controller Power On Hours |
| 40 | High Speed Circuit | 135 | Check Spare Digital Inputs |
| 41 | Check Engine Coolant Temperature | 136 | Check Spare Digital Outputs |
| 42 | Unit Forced to Low Speed | 137 | Check Damper Motor Heater Output |
| 43 | Unit Forced to Low Speed Modulation | 141 | Autoswitch Diesel to Electric Disabled |
| 44 | Check Fuel System | 145 | Loss of Controller "On" Feedback Signal |
| 45 | Hot Gas Bypass or Hot Gas Bypass Circuit | 146 | Software Version Mismatch |
| 46 | Check Air Flow | 148 | Autoswitch Electric to Diesel Disabled |
| 48 | Check Belts/Clutch | 149 | Alarm Not Identified |
| 50 | Reset Clock | 150 | Out of Range Low |
| 52 | Heat Circuit | 151 | Out of Range High |
| 54 | Test Mode Time-out | 157 | OptiSet Plus Mismatch |
| 61 | Low Battery Voltage | 158 | Software failed to load |
| 62 | Ammeter Out of Calibration | 203 | Display Return Air Sensor |
| 63 | Engine Stopped | 204 | Display Discharge Air Sensor |
| 64 | Pretrip Reminder | 252 | Check Fresh Air Exchange Circuit |
| 65 | Abnormal Temperature Differential | | |
| 66 | Low Engine Oil Level | | |
| 67 | Liquid Line Solenoid Circuit | | |
| 68 | Internal Controller Fault | | |
| 70 | Hourmeter Failure | | |
| 74 | Controller Reset to Defaults | | |
| 77 | Controller EPROM Checksum Failure | | |
| 79 | Internal Data Logger Overflow | | |
| 80 | Compressor Temp Sensor | | |
| 81 | High Compressor Temp | | |
| 82 | High Compressor Temperature Shutdown | | |




SR-3 Smart Reefer 3 Microprocessor




Driver Guide to Simple Operation

For more information or tutorial sessions, please contact your Thermo King Service Manager

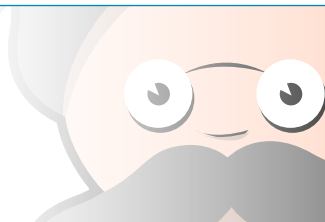


SIMPLE TO START

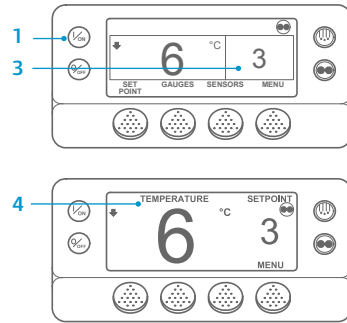

1. Press the ON Key.
2. A series of start-up screens will appear.
3. When the unit is ready to run the Standard Display of Box Temperature and Setpoint will appear.
4. The Standard Display defaults to the "Temperature Watch" screen after 2 1/2 minutes. This screen displays same setpoint and box temperature in larger font.

SIMPLE TO SET


CYCLE-SENTRY or Continuous Run

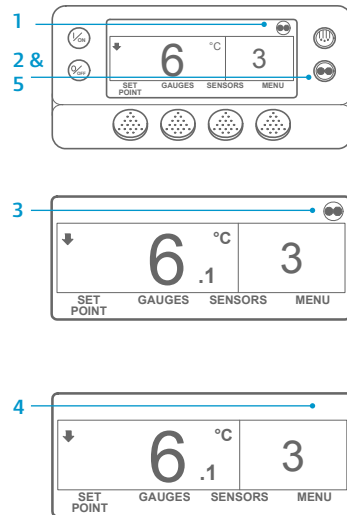

1. Return to the Standard Display.
 2. Press the MODE SELECTION Key.
- IMPORTANT:** As of several years ago, the display no longer shows test at the top of the display to indicate "Cycle Sentry" or "Continuous".
3. If the unit is in Cycle Sentry, the "Cycle Sentry Icon" will appear in the upper right corner of the display as shown.
 4. If the unit is in Continuous the Cycle Sentry Icon will not be present.
 5. Pressing the MODE SELECTION Key again will change the unit back to the previous mode.

SIMPLE TO SET

Setpoint Temperature

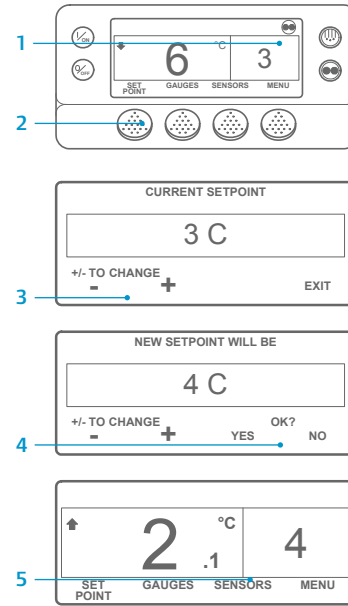


1. Return to the Standard Display.
2. Press the SETPOINT Key on the Standard Display.
3. Press the + or - Keys to change the setpoint reading.
4. Press the YES Key when the desired setpoint is shown.
5. The Standard Display appears with setpoint changed to the new setpoint.

NOTE: You must select the YES key within 10 seconds of selecting the new Setpoint, otherwise the change will be cancelled.

SIMPLE TO CHECK


Gauges

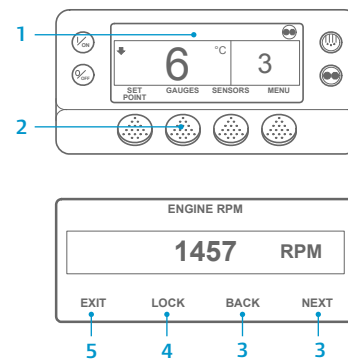

5. Press the EXIT Key to return to the Standard Display.

SIMPLE TO DEFROST


Initiate Manual Defrost

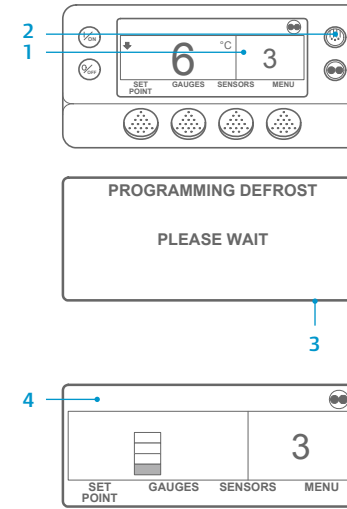

1. Return to the Standard Display.
2. Press the DEFROST Key.
3. A series of defrost screens will appear.
4. The Defrost Display appears. The bar indicator will fill in showing the time remaining to complete the Defrost cycle. When the Defrost cycle is complete the display returns to Standard Display.

SIMPLE TO CHECK


Pretrip Test

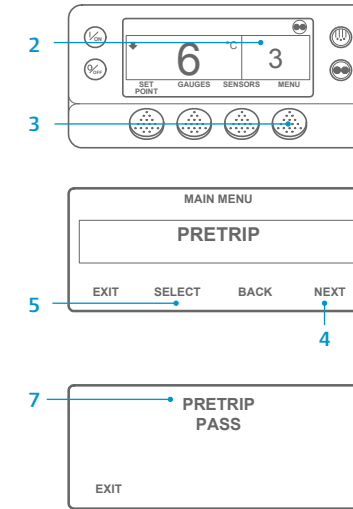

1. Clear all alarm codes.
2. Return to the Standard Display.
3. Press the MENU key.
4. Press the NEXT Key as required to show the Pretrip Menu.
5. Press the SELECT Key to start a Pretrip Test.
6. If the unit is not running, a Full Pretrip will be initiated. If the unit is running in either diesel or electric mode, a Running Pretrip will be performed.
7. When all tests are complete, the results are reported as PASS, CHECK or FAIL. If the results are CHECK or FAIL, the accompanying alarm codes will direct the technician to the cause of the problem.

SIMPLE TO ACCESS


Sensors

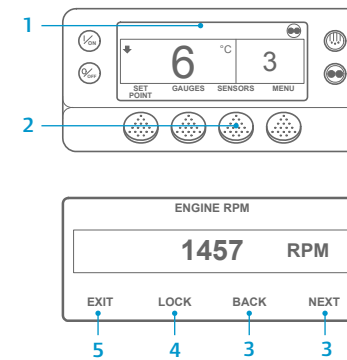

1. Return to the Standard Display.
2. Press the SENSORS Key.
3. Press the BACK or NEXT Keys to scroll through the following sensor screens: Control Return Air Temperature, Display Return Air Temperature, Control Discharge Air Temperature, Display Discharge Air Temperature, Temperature Differential, Evaporator Coil Temperature, Ambient Air Temperature, Spare 1 Temperature, Datalogger Temperature Sensors 1-6 and the Board Temperature Sensor. If no keys are pressed within 30 seconds, the screen will return to the Standard Display.
4. Press the LOCK Key to display any sensor screen for for 15 minutes. Press the key again to unlock the screen.
5. Press the EXIT Key to return to the Standard Display.

SIMPLE TO CHECK

Hourmeters

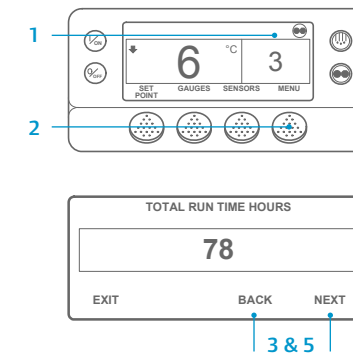

1. Return to the Standard Display screen.
2. Press the MENU Key.
3. Scroll through Main Menu by repeatedly pressing the NEXT and BACK Keys until the hourmeters Main Menu Screen appears.
4. Press the SELECT Key to enter the Hourmeters Menu.
5. Press the NEXT and BACK Keys to view the Hourmeter Displays.

NOTE: For more detailed information on each action, see the Operation chapter in the appropriate unit operating manual.